


Selbsttest: Prüfung des Federkontakts „a“

S 0023

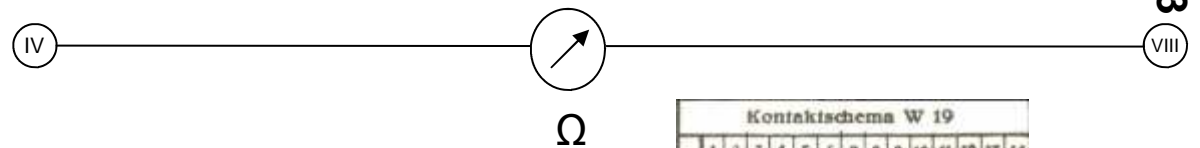

Kontaktschema W 19

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
a	●	●	●	●	●	●	●	●	●	●	●	●	●	●
b	●													
c	●													
d									●					
e												●	●	●
f												●	●	●
g									●	●	●	●	●	●
h									●	●	●	●	●	●
i													●	●
kc													●	●
l	●	●	●	●	●	●	●	●	●	●	●	●	●	●
m	●	●	●	●	●	●	●	●	●	●	●	●	●	●
n	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Prüfanweisung

1. Gerät vom Stromnetz trennen.
2. Keine Röhre aufstecken.
3. Prüfschalter in Stellung 3 drehen.
4. Ohmmeter zwischen die Buchsen IV und VIII schalten.
5. Kleinsten Messbereich wählen.
6. Das Ohmmeter muss aufgrund der Übergangswiderstände ca. 0,1 Ohm anzeigen.